

## Remote Control Illustration

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

# Content

## Installation preparation

01. Remote control installation	01
---------------------------------	----

## Usage Instruction


01. Remote control illustration	03
02. Rear/Front cleaning operation	04
03. Dry operation	04
04. Water volume adjustment	05
05. Spray nozzle position adjustment	05
06. Energy saver	06
07. Auto function	06
08. Temperature adjustment	07
09. Night light	07
10. Full flush/ Half flush	07
11. Water tank flush volume adjustment	08
12. Other Operations	09

# Installation Preparation


## Remote control installation

### Remote control hanger installation


(1) Place the remote control hanger upright on the pre-installed area of the wall and mark the location of the two mounting holes on the wall with a marker. Drill a hole in the marked position on the wall with a drill bit of 6 mm in diameter, with a depth of 35 mm. (When determining the installation location, note that when the person sits on the seat to ensure that the user can catch the remote control.)

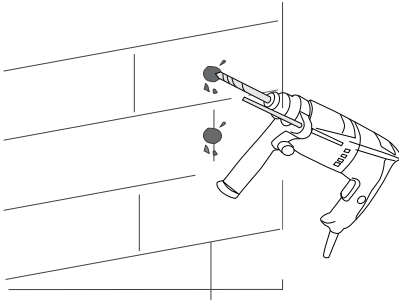


(2) Put the expansion tube into the wall hole and the hanger is tight against the wall. Align the hole in the hanger with the expansion tube and tighten the screw, and then cover the silicone gasket.

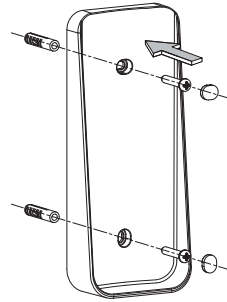

(3) Put batteries into remote control and cover remote control.

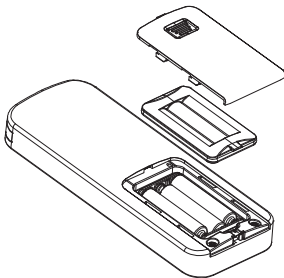

(4) Put remote control to the hanger.

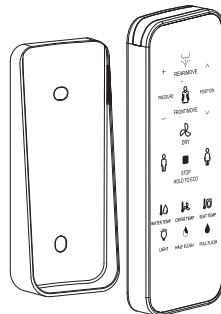


**Notice:** Don't install and use the product in damp places such as shower room. Don't place the product in a place where it is easily exposed to water.

# Installation Preparation


## Remote control installation

Remote control hanger installation ( Only for the hanger matching with fixing board and foam gasket. )


(1) Clean and dry the pre-installed area of the remote control rack on the wall. (When determining the installation location, make sure that the user can reach remote control when he sits on the seat.)

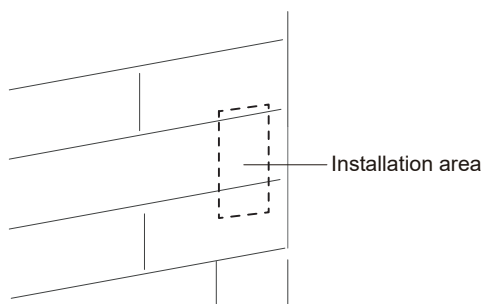


(2) Remove the adhesive tape on the back of the hanger and place it tightly against the wall, then cover the silicon gasket.

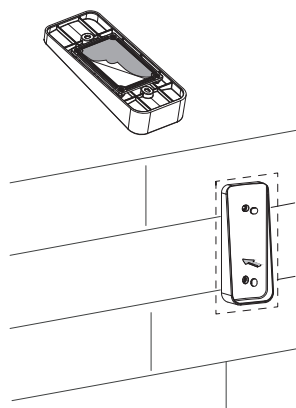

(3) Put batteries into remote control and cover remote control.

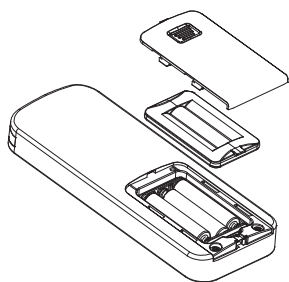


(4) Put remote control to the hanger.

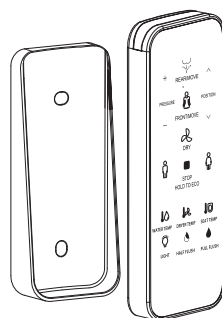

Notice: Don't install and use the product in damp places such as shower room.  
Don't place the product in a place where it is easily exposed to water.

# Usage Instruction

## Remote control illustration

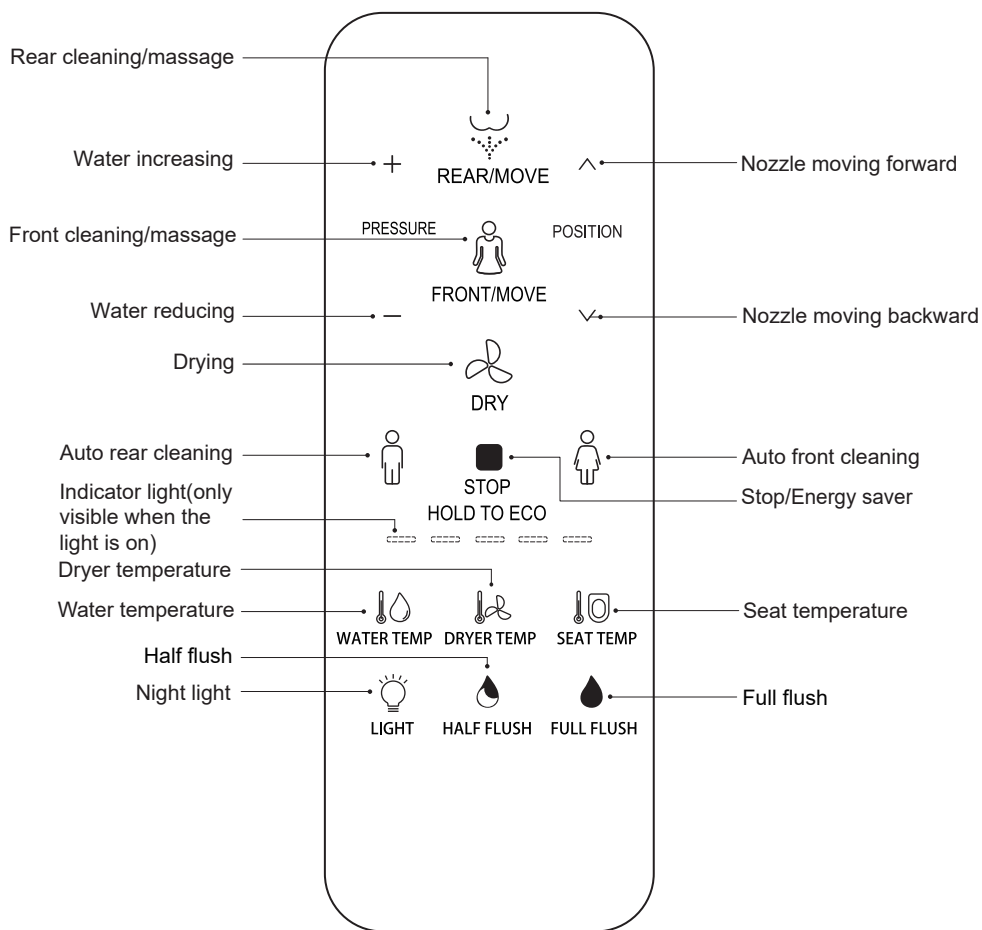


## Rear/Front cleaning

· Press “Rear cleaning/massage” button, the indicator light is on showing current water temperature level, it starts rear cleaning; Press again “Rear cleaning/massage” button to shift to massage to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses “STOP” button.

· Press “Front cleaning/massage” button, the indicator light is on showing current water temperature level, it starts front cleaning; Press again “Front cleaning/massage” button to shift to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses “STOP” button.

## Drying Operation

· Press “Dry” button, the indicator light is on showing current wind temperature level, it starts drying; it will stop drying automatically after a circle or the user leaves the seat.

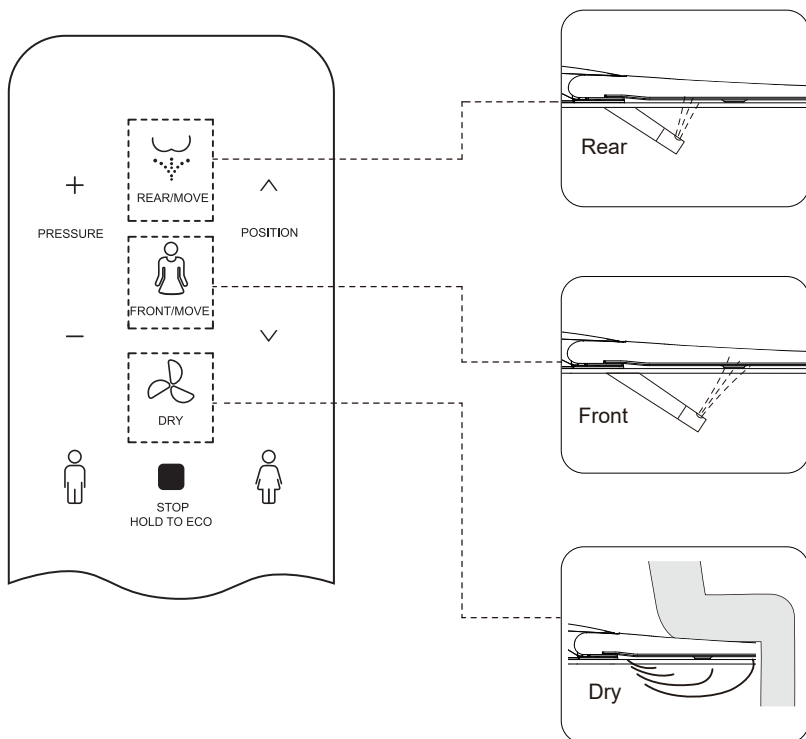


## Water volume adjustment

- Press “+” or “-” button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current water volume level, adjust water volume by 3 levels.

## Spray nozzle position adjustment

- Press “^” or “v” button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current nozzle position, adjust nozzle position by 5 levels.

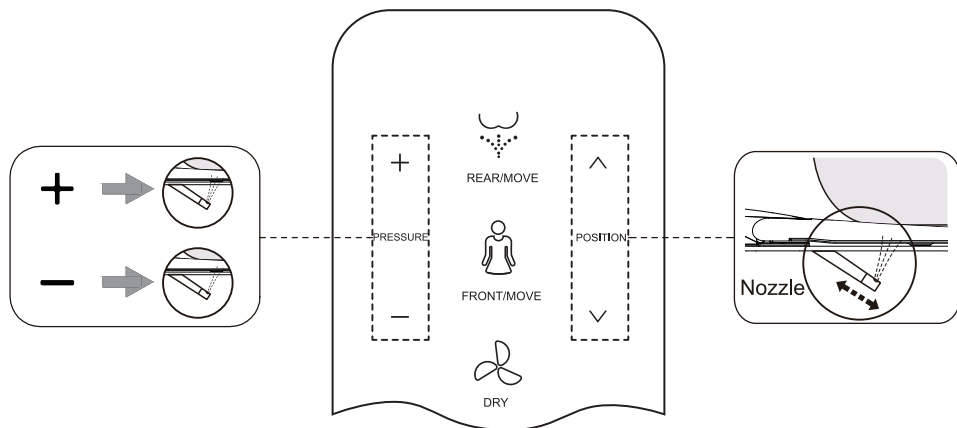

# Usage Instruction

## Energy saver

Keep pressing "STOP" button for more than 3S to enter energy saving mode, the indicator light will be off and energy saving light will be on. Keep pressing "STOP" button again for more than 3S to exit energy saving mode, the indicator light will be on and energy saving light will be off.



## Energy saving

Under energy saving mode, seat temperature is low(level 1) to achieve energy saving. (Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

## Remark

Energy saving mode will be suspended and goes to function mode if someone uses the seat in the middle of energy saving. The seat starts to heat immediately (without closing the seat temperature), and the energy saving mode is restored after the human body leaves the seat.

## Auto function

- The automatic function of factory default setting is middle level for water volume, nozzle position, water temperature, air temperature, seat temperature.
- Short press on the remote control button "", " " can achieve male hip wash and female bidet wash, fully automatic and convenient use. The user can firstly set the water volume, nozzle position, water temperature gear position and air temperature gear position. After the setting is completed, press the corresponding automatic key 3s to save the setting. The next time you use it, you can call the saved key by pressing the corresponding automatic key. Set the automatic function to enable automatic cleaning and drying in the whole process.
- The Auto function mode will be off if the user presses other buttons during operation of auto functions and shift to operate the functions of the buttons.



Auto rear cleaning → Rear cleaning 20s → Massage cleaning 30s →  
Rear cleaning 40s → Dry 180s → Automatic stop



Auto front cleaning → Front cleaning 20s → Massage cleaning 30s →  
Front cleaning 40s → Dry 180s → Automatic stop



## Temperature adjustment

### · Water temperature adjustment

Short press the "WATER TEMP" button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water level is 0. Short press this button to adjust water temperature level from 0 to 5 in cycle. (Note: the water temperature is set at  $10 \pm 2.5^\circ\text{C}$  in level 0, that is, when the inlet water temperature is higher than  $10^\circ\text{C}$ , the water won't be heated, while when the inlet water temperature is lower than  $10^\circ\text{C}$ , the water will be heated to about  $10^\circ\text{C}$ .)

### · Dryer temperature adjustment

Short press the "DRYER TEMP" button to adjust the dryer temperature. The indicator will show the dryer temperature level if it's on. When the indicator is off, the wind level is 0. Short press this button to adjust dryer temperature level from 0 to 5 in cycle.

### · Seat temperature adjustment

Short press the "SEAT TEMP" button to adjust the seat temperature.

The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5 in cycle.



## Night light

· Short press "Night light" button to turn on/turn off night light, long press "Night light" button to enter into intelligent mode ( Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press "Night light" button to exit intelligent mode.





## Half flush/Full flush

· Short press "FULL FLUSH" button, the toilet starts full flushing.

· Short press "HALF FLUSH" button, the toilet starts half flushing.

· Long press "FULL FLUSH" button to turn on/off auto flush function. When the auto flush function is on, when it's detected that the user is seated for above 6s and leaves the seat for above 3.5s, it'll flush automatically.

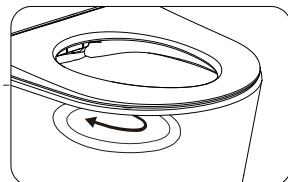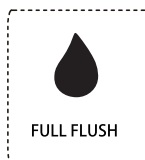

## Water tank flush volume adjustment

- Firstly press and hold the "Full Flush" key, and press the water volume "+" key to enter the full flush volume plus 1 gear adjustment;
- Firstly press and hold the "Full Flush" key, and press the water volume "-" key to enter the full flush volume reduce 1 gear adjustment;
- Firstly press and hold the "Half Flush" key, and press the water volume "+" key to enter the half flush volume plus 1 gear adjustment;
- Firstly press and hold the "Half Flush" key, and press the water volume "-" key to enter the half flush volume reduce 1 gear adjustment;

Tips: When adjusting to the highest or lowest gear, the buzzer beeps twice.

## Other Operations

### User Code

- The user code needs to be set to avoid disturbance from remote controls when more than one smart toilets are used in the house. Turn on the toilet for setting while turning off others. Press user code combination buttons (Press "STOP" button first and then press "REAR" button) to enter user code setting mode, the indicator lights will be on and keep flashing.
- The Remote control will generate matching user code automatically, press user code combination buttons again to exit setting mode and setting is completed. When the main unit is powered off to restart or change remote control batteries, user code won't be cleared and no need to reset.

### Quite mode

Long press "SEAT TEMP" button to turn on/off quite mode.

### Auto deodorization


Long press "HALF FLUSH" button to turn on/off auto deodorization function. While the auto deodorization function is on, when it's detected that the user is seated, it'll start deodorizing and stops when user leaves above 3s. The auto deodorization function will turn off automatically during drying. (This function only applies to product with auto deodorization function. This function is set to on by default.)

### Flush by water tank with electronic cover

Firstly press and hold the "Stop" key, and press the "water temperature" key to start the flush by water tank with electronic cover. (This key combination is only for the toilet with flush by water tank with electronic cover)

### Remark:

- The buzzer will sound "BEEP" when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.
- The body should touch the seat and the buzzer rings "CLICK", which means functions of front cleaning, rear cleaning and drying are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.

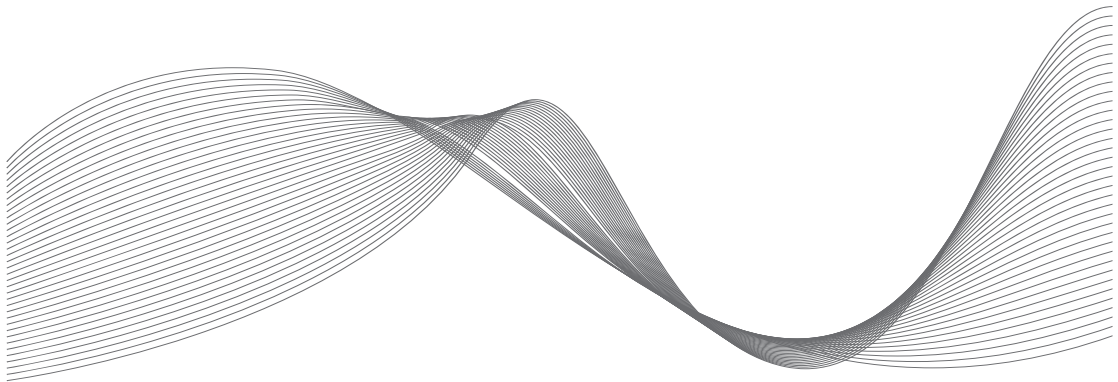

The picture of product may not entirely consistent with actual appearance and color because of products improvement, please in kind prevail.