

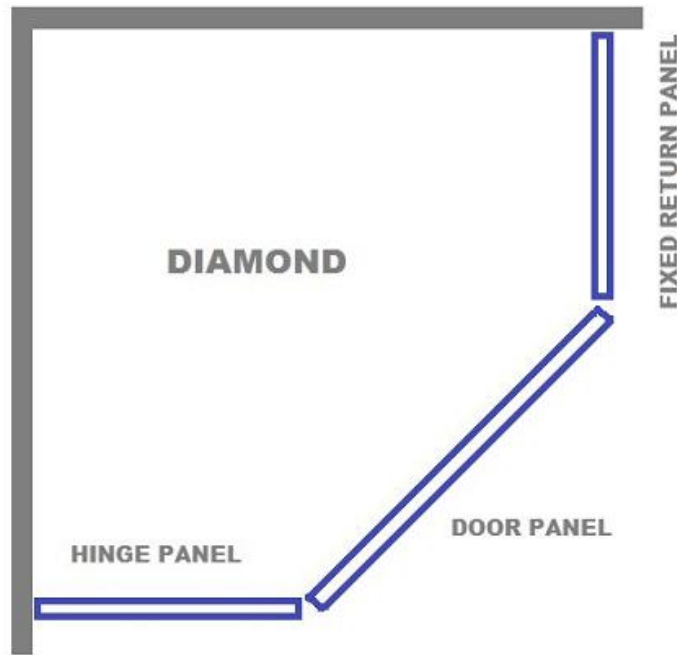


PLEASE READ BELOW INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE SHOWER SCREENS

- Always rest the glass panels on paddings. Clear setting blocks (clear plastic strips 2mm-5mm) are required to apply under the glass panels, and permanently stays under the panel with silicone. Toughen glass is extremely fragile on the 4 corners, glass panel will shatter if it is not handled properly
- Never rest the glass panels directly onto a tiled surface during and after installation. Take extreme caution not to cause any grinding or hard impacts to the glass panels. Safety glass will also shatter if the above mentioned are not observed
- Certified glaziers are highly recommended for installation of our shower screens
- All our measurements are including the thickness of glass (10mm). Measure precisely and mark on walls and floors before drilling holes, once holes are drilled, the adjustments are limited, please see the diagram for bracket allocations
- Shower screen is reversible i.e.it can be installed as a RH opening or LH opening door
- For the best installation results, the walls and floors need to be straight and level
- For the best shower door performance, the hinges are required to be tightened every month for the first 3 months
- After panels are in position, seal glass panels to wall/floor using structural clear silicone. Apply a generous amount of silicone to the walls and floor. Spray soapy water on wet silicone and clean excess silicone using applicator
- Do not use shower until sealant cures (at least 48 hours)

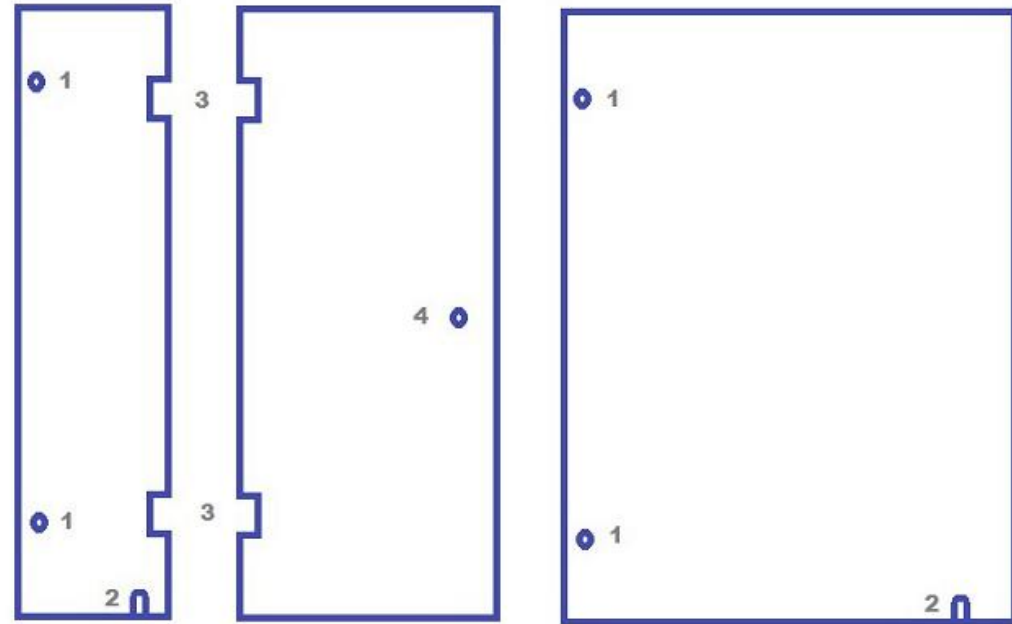

PLEASE READ BELOW INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE SHOWER SCREENS

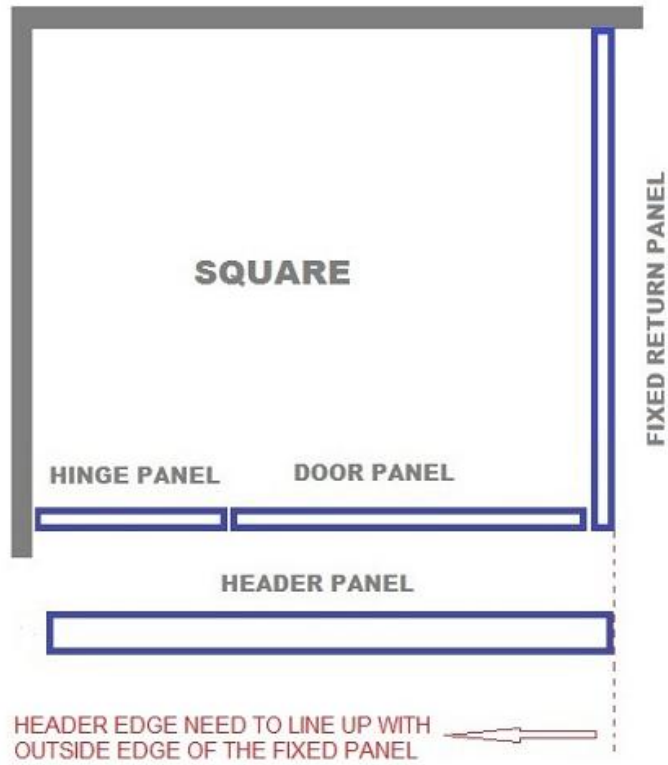

ITEM NUMBER	DESCRIPTION	DIAGRAM LOCATION
6137	WALL BRACKETS	1
6140	FLOOR BRACKETS	2
6208	SQUARE HINGES	3
6207	DIAMOND HINGES	3
888/815	DOOR KNOBS	4
164	U BRACKET	